

# ACTIVESHOP®

## INSTRUCTIONS FOR USE

iWax Flower Wax Warmer



### Importer:

 
ACTIVESHOP Ltd.  
Ul. Graniczna 8b, building  
DC2A 54-610 Wrocław,  
Poland  
[www.activeshop.com.pl](http://www.activeshop.com.pl)  
Rev. A/01/2025



### Technical data:


Power	100W
Voltage	220-240V, 50Hz
Temperature control	35°C -120°C
Dimensions	16.5 x 16.5 x 15.8cm

### Control Panel:

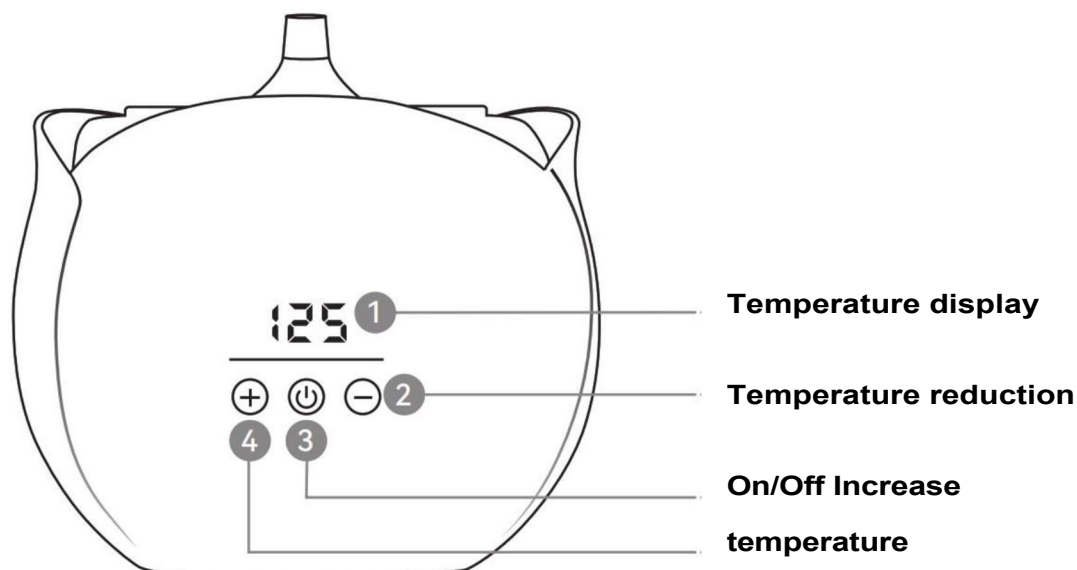


### Usage:

 1. Place the device on a straight and dry surface.
2. Lift the lid of the heater and place the wax in the heater.
3. Connect the device to the power supply.
4. Press the number 3 button to turn on the device.

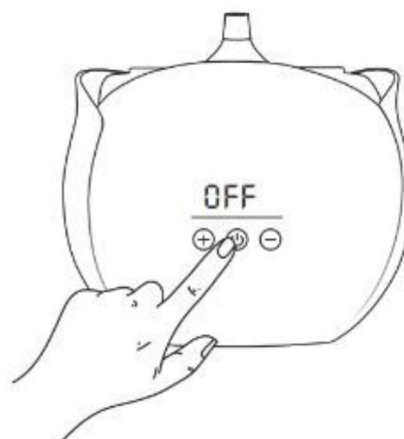

5. Use buttons 2 and 4 to set the desired temperature. The operating range of the device is 35°C- 125°C. The device is set to 70°C by default. Holding down the buttons allows you to change the settings faster.
6. After setting the temperature, wait until the number on the display stops blinking (temperature approval), and then until the heater warms up to the desired temperature (the bar under the temperature stops moving from left to right)

 7. Wait for the wax to melt completely before starting work.
8. After completion of operation Turn off the heater with the number 3 button and disconnect from the power supply.
9. Wait until the wax has cooled before cleaning the heater.
10. Clean the heater and put it in a dry place

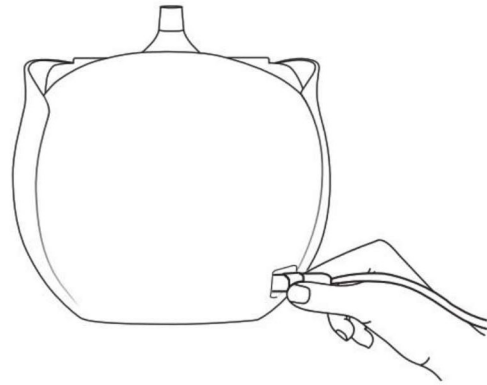

#### **Cleaning the device:**

1. Do not use solvents or strong cleaning agents.
2. Always unplug the device before cleaning.
3. The device should not be soaked in water.
4. Do not use sharp objects for cleaning.
5. You can use a special liquid to remove wax residues.

#### **SECURITY MEASURES**

1. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. Any service and repair work must be performed only by an authorized service technician (ACTIVESHOP Ltd.).
2. Do not install or operate the device near liquids, wet areas or with wet hands - so that no liquids get into the device.
3. Immediately remove the plug from the outlet and contact the authorized service provided by ACTIVESHOP Ltd. in the following cases:
  - a) Liquid has entered the device, b) the device emits a strange odor, smoke, or makes strange sounds, c) the power cord has been damaged, d) the device has been knocked over or its housing has been damaged.
4. Do not put any objects on the cables. Do not install the unit where someone may step on the power cord.
5. For safety purposes, remove the power cord from the outlet each time you finish working with the device.
6. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
7. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
8. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).
9. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device, damage or even burning.

## **NOTE!**

1. In case of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.
2. This equipment may be used by children at least 8 years of age and by persons of diminished physical and mental capabilities and persons with inexperience and lack of familiarity with the equipment, if supervision or instruction on the use of the equipment in a safe manner is provided so that the associated risks are understood.
3. The device is not intended for play by children. Do not allow children to play with the device.
4. Do not leave the device unattended when children or persons without sufficient knowledge of how to use the device are in the vicinity.
5. This electrical appliance is not a toy. Improper use or contact with the electrical appliance may pose a health risk or lead to death, so keep it out of the reach of children.

## **DISPOSAL OF THE DEVICE**



Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance environmental protection principles. Electrical appliances should not be thrown into household waste containers. Follow in accordance with rules for disposal of this type of

equipment. In order to protect the environment in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, waste electrical equipment should be collected separately, and sent to collection centers for waste electronic and electrical equipment. At the end of their useful life, as well as old appliances containing full-value recyclable components, so they should be sent for reprocessing. Therefore, they should be handed over to appropriate collection points, as well as they can be handed over to ACTIVESHOP Ltd.

## **STORAGE AND TRANSPORT**

The device should be transported at a temperature range of (-) 20 °C to (+) 50 °C only in its original packaging. Store the device in a well-ventilated place and a relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During the storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.