

ACTIVESHOP®

USER MANUAL

SAKURA COMFORT PLUS 806 MASSAGE CHAIR



Importer:

ACTIVESHOP Sp. z o.o.
8b Graniczna St., building
DC2A 54-610 Wrocław,
Poland
www.activeshop.com.pl
Rev. A/02/2025



Important:

Read the following instructions carefully before operating the chair to avoid physical damage and property damage during use.

Warning

Keep children away from moving parts of the device.

This massage chair should only be used with a well-grounded power source. Use only the power adapter supplied with this massage chair.

Remove the plug from the outlet after use or before cleaning to avoid damaging the equipment or endangering your life. Use only as recommended in this manual.

Do not use with accessories and parts that are not supplied or recommended for use with the massage chair. Do not use this massage chair outdoors.

Do not use this massage chair when the cover is damaged. Do not use this massage chair when the inner and outer cover is damaged.

Do not cover the heat sink of the device with anything. Do not let anything fall into the device.

Do not sleep while using this device.

Do not use this device within one hour after eating.

If your body has suffered significant injury, do not set the device to maximum intensity.

Do not use a "waist warming" massage for an extended period of time. Do not sit on the chair when you have wet clothes or body.

Before using this massage chair, open the cape to check that the fabric of the back cover within the range of motion of the massage wheel or other parts is not damaged.

If you find any damage, stop using the chair immediately and unplug it from the outlet.

After each use, move the main power switch to the "0" position and disconnect it from the wall outlet.

Do not disassemble or repair this product yourself.

Do not use in short intervals. Do not use this massage chair for a long period of time.

Do not stab this device with a sharp object.

Not allowed

1. Do not use this device in a very humid environment such as a bathroom.
2. Do not use this device immediately after a change in ambient temperature.
3. Do not use this device in an environment with a lot of dust or corrosive gas.
4. Do not use this device in narrow spaces or places with poor ventilation.

This chair is not intended for use by: people with osteoporosis, those with heart disease or those wearing electronic medical devices such as pacemakers, people who have a high fever, pregnant or menstruating women, people after physical or mental injuries. Children under the age of 14 without adult supervision. People who are sensitive to heat, such as the elderly and children, should only use it under direct supervision.

1. Check that the voltage matches the specifications of the device.
2. Do not use a wet hand to connect or disconnect the power source.
3. Do not allow water to enter the device.
4. Avoid electric shock or damage to the massage chair.
5. Do not damage the wiring or tamper with the perimeter of the chair.
6. Do not use a wet cloth to clean the power switch, plug and other electrical parts of the device.
7. If you feel that the chair is not working properly, stop using the device immediately.
8. This massage chair is not intended for use by people with physical disabilities, sensory or neurological disorders or children. Unless they have received supervision and guidance on the use of the device from those responsible for their safety.

9. Children should be supervised to ensure that they do not play with the chair's components.
10. Do not stand on the massage chair, jump on it or put anything on it as long as there is air in the cushions.
11. Do not put your hand or foot in the crevices of the chair.
12. Do not put your hand, arm or head into the crevices of the calf and foot massage seat.
13. Do not put your hand, arm or head between the backrest and the back cover.
14. Do not put pets on the massage seat (back cover, backrest, armrest, etc.).
15. Strictly adhere to the use of outlets and wiring, and use AC 220-240 V, 50/60 Hz.
16. Make sure the plug is plugged in all the way so that it is fully inserted into the outlet, otherwise it may cause electric shock or fire due to overheating.
17. In case of abnormality or malfunction, immediately stop using and disconnect the power supply.
18. Do not damage the power cord or plug (avoid damaging, machining mechanical treatment, bending, twisting, stretching the power cord and power plug, or placing the power cord and plug near the heater or attaching heavy objects to or binding the power cord and power plug). Do not use a damaged power cord or plug, it may cause electric shock, short circuit or fire.
19. Do not store the unit near high temperature or fire.
20. Do not expose the device to direct sunlight.
21. Do not use thinner, benzene or alcohol.
22. Do not push or pull the device on an uneven floor.

Note

- Recommended to use the device for no longer than 30 minutes.
- In case of a power failure, leave the device and disconnect the power source to avoid injury.
- If you feel discomfort while using this device, stop using it immediately and consult a doctor.
- Do not pull on the power cord. Grasp the plug and pull it out, otherwise it may cause an accident or injury.
- Before moving this device, adjust the angle of the shin and foot massage parts back to the original position otherwise it may cause injury.
- Remove surrounding obstacles before moving the device with the wheels - lift the leg massage parts to a position slightly lower than your waist and move slowly. If you use casters to move the device with casters, cover the floor with soft mats, etc., otherwise scratches may remain on the floor.
- Before using, place the device on a level surface; otherwise, it may cause an accident due to the device tipping over.
- If the device is not used for a long time, it is necessary to re-read the product instructions and confirm the normal operation of the device, and then start using it.
- Do not use the device with other devices.
- Do not press your head, abdomen or skin against the massaging wheel.

- Also, do not put your hands or feet between the massaging wheels.
- Do not place your knees in the calf massage area.
- After use, turn the main power switch to the "0" position and unplug from the outlet.
Do not use the waist warming massage for a long time.
- Be sure to turn off the main power switch after use.
If the device is not used for a long time, store it in a dry and dust-free place.

Do not

Do not use waist massage for the following people.

- 1) People with acute sacral pain, herniated disc, lumbar displacement.
- 2) Persons suffering from arthritis. The following people, (even if they are healthy) should consult a doctor before using this device.
- 3) People with muscle atrophy as a result of age or thinness.
- 4) People who have back pain due to bone or visceral problems.
- 5) People prone to sprains or bone problems.
- 6) Persons who have acute motion sickness.
- 7) People who have previously undergone surgery.
- 8) If you have a rash, redness, itching or other symptoms caused by using this device, stop using it immediately and consult a doctor.
- 9) Do not pull on the power cord.
- 10) Do not use the device if you are wearing jewelry on your head and hand (e.g., hair pins, watch) or attachable nails - they should be removed.
- 11) When you have something in your pants pocket (e.g., cell phone, keys, etc.) you should take it out.
- 12) Stop the operation of the massage chair before leaving the seat. Otherwise, you may cause an accident or injury.
- 13) Do not pull the plug or turn off the power suddenly during the massage.
- 14) Do not stand or sit on the back cover and armrest. Otherwise, the device may tip over and cause injury.
- 15) Do not move the device while someone is sitting on the massage chair, as this may cause an accident or injury if the device tips over.
- 16) Do not use this device on heating devices such as an electric blanket.
- 17) Do not put the control panel on the seat during use.
- 18) The device has a grounded plug. Make sure the device is plugged into an outlet that is shaped to fit the plug.

Grounding description

The device must be grounded. In the event of a functional failure of the machine, grounding can be used to reduce the risk of electric shock.

The machine is equipped with a power cord with an equipment grounding wire and a grounded plug.

The plug must be connected to a suitable outlet that has been properly installed and grounded fully in accordance with local laws and regulations.

Warning

If the equipment's grounding wire is not properly connected, it may cause electric shock. If you have questions about the proper grounding of this appliance. Please have it inspected by a professional electrician.

Even if the plug and receptacle connected to the appliance are provided, they cannot be modified.

Please entrust professional electricians to install the appropriate outlets, the appliance has a grounded plug.

Make sure the appliance is connected to an outlet with the correct shape of plug. The device cannot use the adapter.

If the power cord is damaged, please replace it by contacting a service center authorized by the company.

Application

The chair is used to massage the body, relieve fatigue, improve blood circulation, accelerate recovery and reduce stress levels.

TECHNICAL SPECIFICATIONS

Input voltage - 220-240 V

Current frequency - 50/60Hz


Power - 130 W

Maximum working time - 30 minutes

SEAT DESIGN

- Cushion at the head
- Shoulder cushion
- Speaker
- Seat controller
- Electrical panel
- Side cover
- Shoulder cushion
- Seat cushion
- Calf and foot cushion
- LED seat illumination

3D massage from
neck to
buttocks

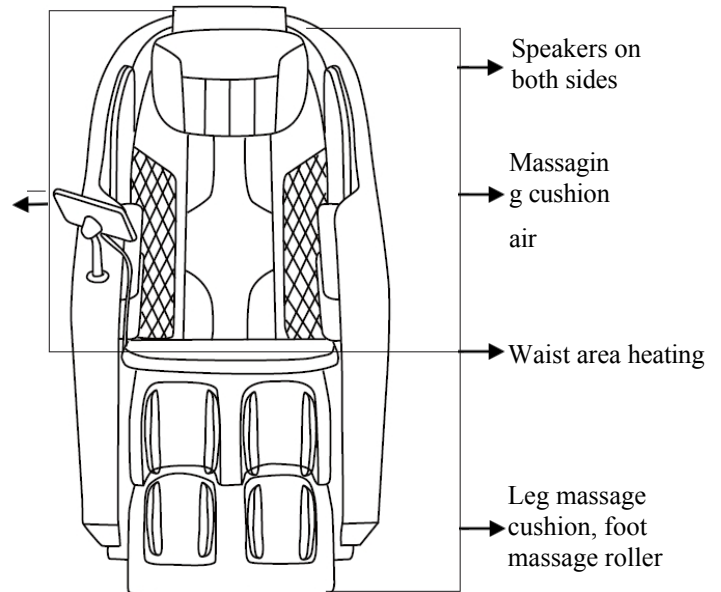


INSTALLATION

Installation position

Make sure there is enough space for the chair to recline. Make sure the area where the chair will be located is clean and that no cables are lying there.

Warning

Remember to set the main power switch to the "0" position before unplugging the power cord when moving.

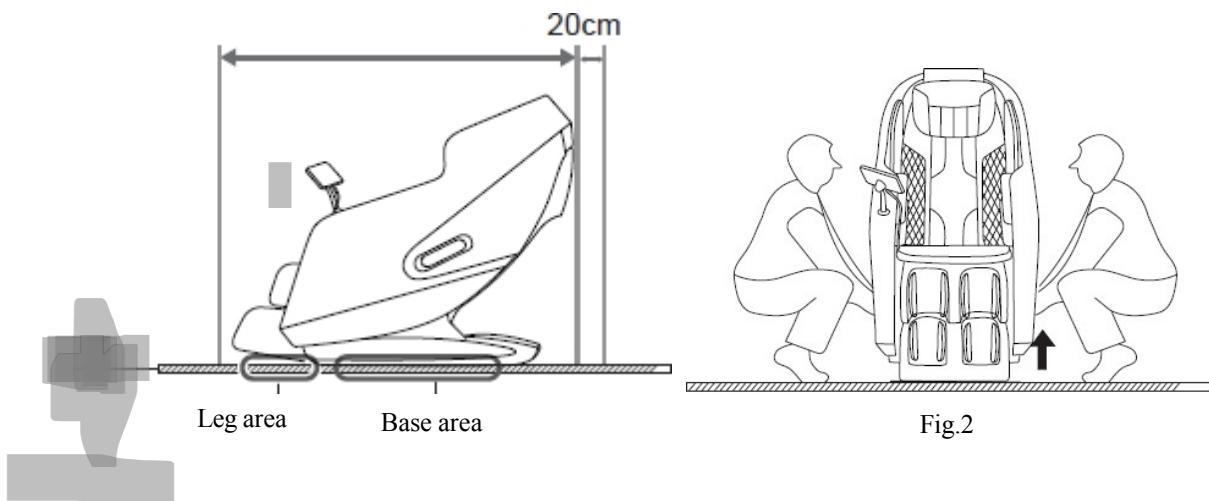

Handling instructions

- 1) Hold the lower part of the base frame on both sides, then lift and move it (See Fig.2). Lift the massage chair to move on a sensitive surface such as a wooden floor.
- 2) Then put your hand into the bottom of the seat frame to hold the steel frame. Lift it so that you can secure the plastic parts on the outside of the seat frame.
- 3) Set the device on the floor.

Note: Set the device down slowly and be careful not to pinch your feet. Do not open the footrest until the device is completely flat. Suddenly releasing the handle will cause the footrest to return to its original position. The floor may be damaged, so it is recommended to put additional protection on the floor.

CAUTION

- Do not pull or push the unit when it is not mounted.
- Do not hold the side plate or plastic part outside the seat frame when moving it. Failure to do so may result in malfunction or injury.
- Do not move the unit when people are sitting on it. Otherwise, it may cause an accident.
- Before moving the unit, turn off the power and make sure the backrest and legs are fully lowered. Otherwise, the device may malfunction or injury may occur.

Another method of moving- use the rear wheel to move the massage chair. Press the "  " button to turn off all functions. Move the backrest and legs of the device to the original position. Press the power switch at the bottom of the back of the device to the "0" (off) position, then unplug the power plug. Tilt the chair down about 45 degrees to move it (see Figure 3).

Caution Do not push too hard to avoid damage to the device caused by a complete fall of the chair. If you use a caster to carry the unit, place a safety device on the floor to avoid scratching the floor.



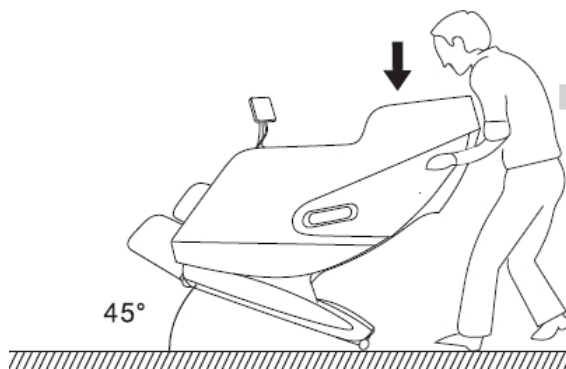


Fig. 3

Check the surroundings. Make sure there are no people, animals or other objects around the device.


Make sure there is nothing between the slots of the machine. Before massaging, make sure there are no foreign objects in the leg, foot and other positions.

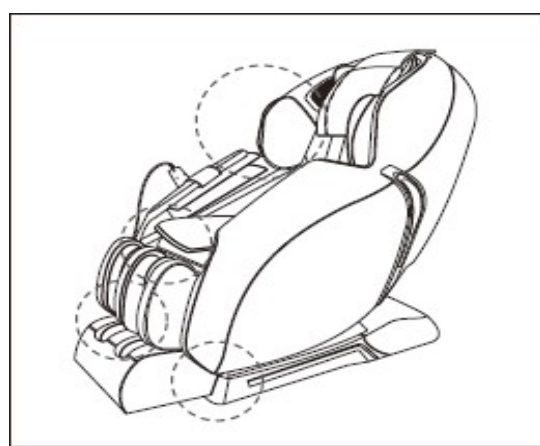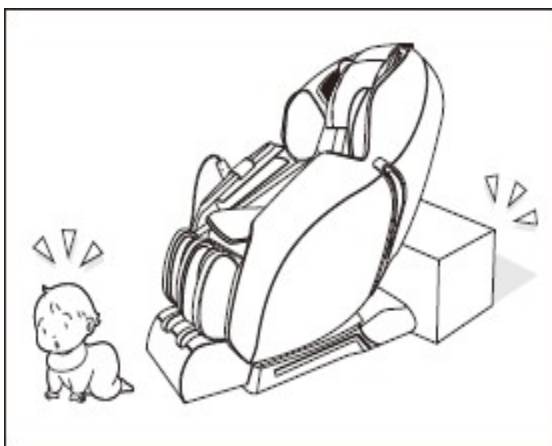

Note

- Do not put your hands, fingers, feet or head in the gap between the lower leg and the seat or armrest.
- Make sure nothing is between all parts of the device before starting the massage.
- Do not put your hands, arms or head between the backrest and the rear cover.
- Do not put animals on the seat (seat, backrest, handrail, leg, etc.).

Check the fabric for damage and cracks.


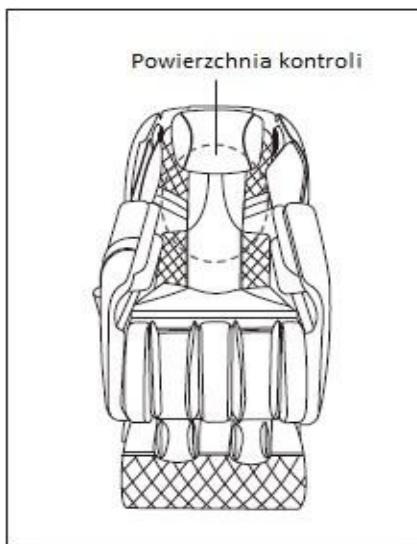


Note

Before use, remove the fabric from the chair so that you can access the area marked in the photo. Make sure that the fabric as well as other parts are not damaged. (No matter how small the defect is, if it occurs, stop using immediately, unplug the device and contact an authorized service center). Using the device with a defect may cause injury or electrocution.

POWER ON

Insert the end of the power cord at the back of the massage chair electrical box and the other end into the electrical outlet. Set the main switch on the back of the massage chair electrical box to the "1" position.

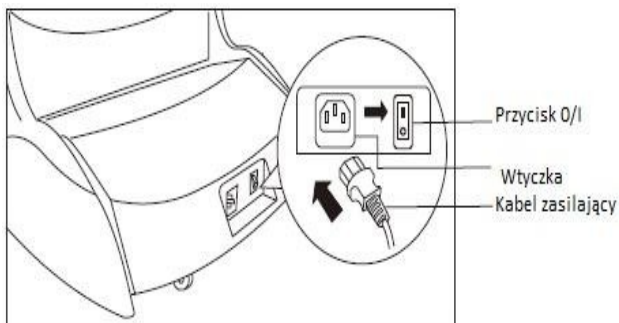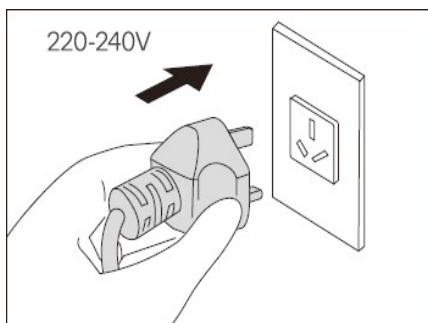


Note

- Check the power cord and plug for damage before use.
- Before starting the massage, make sure there is nothing between all parts of the device. Make sure the power supply is well connected. Otherwise, it may cause electric shock or overheating and cause fire.
- Please use 220V,50Hz.AC
- Do not connect or disconnect the power plug with wet hands.
- Do not use the transformer without permission. It may cause fire or overheating.
- Do not plug or unplug the device with wet hands.

Bluetooth pairing- turn on Bluetooth on your device to search for the model name of the device ("**806A**") and connect to it. Music played from the device will be played from the chair's built-in speaker.

Features of the chair

The Sakura Comfort plus 806 chair has a body detection system that recognizes shoulder position, height and body type to adjust the massage roller mechanism. When the chair is turned on The massaging rollers will start moving up and down collecting information and adjusting the chair for your dimensions. At the end of the body detection process, you will hear a beeping sound, during which you still have a moment to adjust the seat position using the UP and DOWN buttons. If the body detection system is not working properly, make sure you are sitting in an upright position. You can also move the cushion behind your head upward so that the rollers have easier access to the neck area.

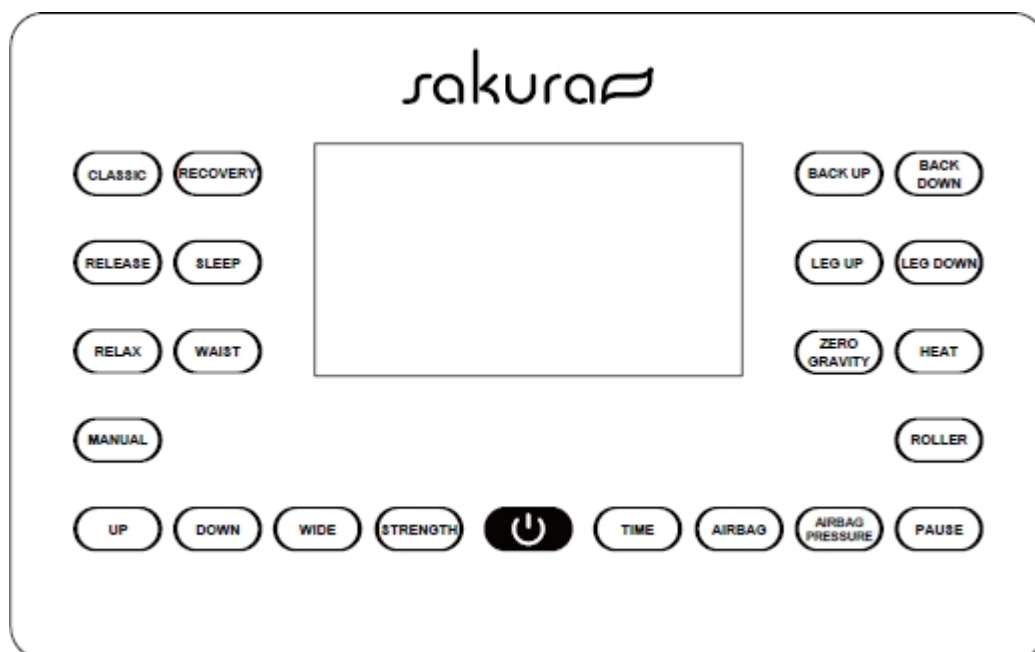

	The massage chair automatically tilts at an angle to begin detecting arm positions. When turned off, the display screen goes blank and the massage chair returns to the standby position.
	This mode works on the neck, waist, hips and other parts of the body, massaging evenly using kneading, strokes and spot massaging. The combination of movements is rich in varying degrees of intensity, with an occasional stretching function.
	Press this key to activate all functions. Then press again to continue the interrupted program.
	This mode, based on kneading, massaging and other techniques, increases the duration, strength and rhythm of massaging the lower back.
	This mode focuses mainly on the neck and shoulders, offering neck kneading, shoulder massaging and strokes.
	A mode designed for massage while sleeping, including neck, waist, lower back massage and cradle function.
	This mode mainly focuses on Thai massage, including kneading, massaging, stroking and other functions.
	A mode dedicated to waist massage, kneading, stroking and massaging.
	When turned on, the seat reclines to the maximum and the legs are raised to the highest level. When turned off, the backrest returns to a certain angle and the footrest drops to a certain level.
	Press to raise the seat and stop at the current position.


BACK DOWN	Press to lower the seat and stop at the current position.
LEG UP	Press to raise the footrest and stop at the current position.
LEG DOWN	Press to lower the footrest and stop at the current position.
STRENGTH	Press to adjust the intensity of the massage. Each press changes one of the 5 adjustment levels.
WIDE	Press this button to adjust the "width, medium and narrow" of the massage head. Each time, the width changes. (Note: this function only works in manual mode during kneading, massaging, tapping and finger pressure).
MANUAL	Automatic mode can be changed to manual mode. Various modes available for selection: massage, kneading, patting, tapping, shiatsu, kneading and tapping, kneading and scraping, sequential cycle.
HEAT	Turn on/off the heat function. (By default, it is turned off at startup).
ROLLER	Enable/disable roller.
AIRBAG PRESSURE	A total of 5 intensity levels can be adjusted. The default setting is medium level after startup. Press the button once to switch to the next level, cycling through.
AIRBAG	Toggle the position of the airbag massage.
UP	Press the up adjustment button to move the massage mechanism upward. Can be adjusted both in standby mode and during operation.
DOWN	Press the down adjustment button to move the massage mechanism downward. Can be adjusted both in standby mode and during operation.

	Press to set the operating time of the device. Each click changes the time between 5, 10, 15, 20, 25 and 30 minutes.
---	--


PRECAUTIONS

Note Children are not allowed to use this device. Do not let children play on the massage chair or climb on the calves, seat, foot massage, backrests or armrests. Otherwise, it may cause an accident or injury.


1. After use, press "⏻" to turn off the chair, it will then return to its initial state (upright state).
2. Slowly remove the legs from the leg massage section.

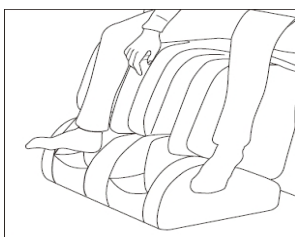

3. Turn off the chair with the button

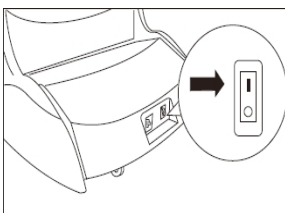

4. Disconnect the chair from the main power supply.

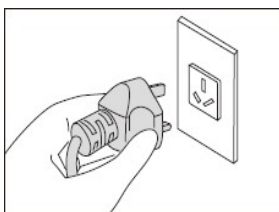


CLEANING AND CARE

Cleaning leather surfaces:

Wipe the leather with a soft, dry cloth. Do not use chemicals such as thinners, gasoline and alcohol-based preparations for cleaning. When using available on


The market for leather care products (rags) should follow the instructions. Dip a soft cloth in water with 3%-5% neutral detergent and wring it out thoroughly. Wipe the leather

surface with a soft cloth and wait until it it dry. Do not use a blower to dry the surface. Do not use denim or colored fabrics to wipe the device, as the color of the of the fabric will be stained on the surface of the synthetic leather. When using hair dye, cover the contact part with a towel, as the synthetic leather may change color. If you have had trouble removing the dirt, please dip the oxide-based cleaning foam in a neutral detergent and use it to wipe the dirt.

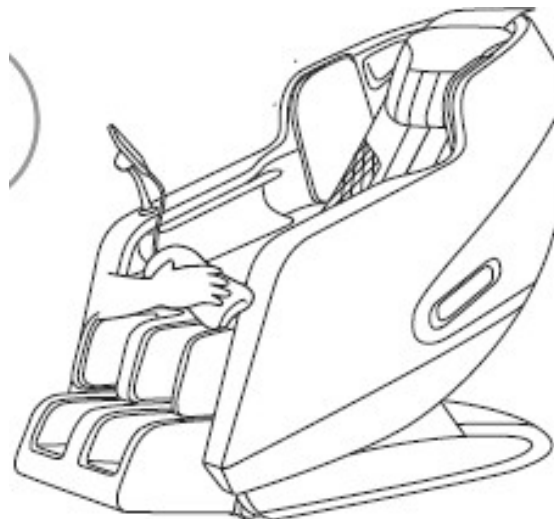

Cleaning plastic surfaces

Wipe the leather with a soft, dry cloth. Dip a soft cloth in water containing neutral detergent, wring it dry and wipe the plastic part of the device. Do not use chemicals such as thinners, gasoline, alcohol-based preparations, etc. Allow to dry.

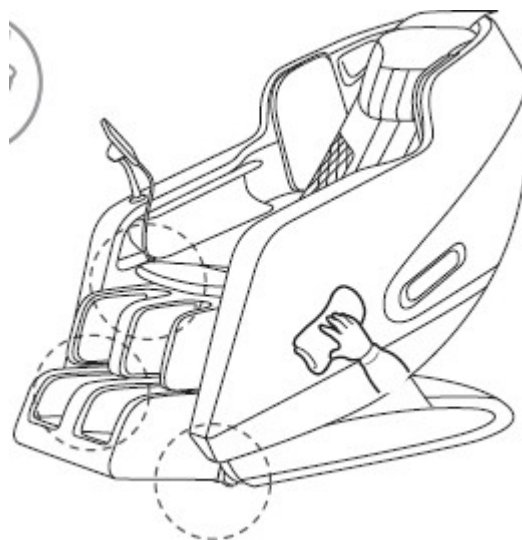

QUESTIONS

* Sound of the massage chair operation

The sound produced by the massage chair is generally caused by the structure of the movement of the massage rollers.

* Can height affect the quality of the massage?


When users with a height of less than 145 cm or more than 180 cm apply upper body massage and calf and foot massage at the same time, they may experience weaker massage in the calf and foot area.

* Too much pressure on the feet.

Use the , "airbag pressure" button to set the airbag power to the lowest mode. Reducing the massaging force in the calf area can also reduce the feeling of foot pressure.

* What should we pay attention to during transportation?

- Pay attention to the following:
- Please tilt the back of the massage chair to the lowest position to make it easier to move.
- Do not sit on the seat during transportation.
- Press the button to turn on the power.
- Press the "zero gravity" button to tilt the backrest completely.
- Set the main power switch to the "0" position and remove the plug from the outlet.
- In the case of original boxes, make sure that the power cord is not wrapped on the device and lay it on the seat surface.
- In the absence of original boxes, to prevent scratches and vibrations during transportation, carefully protect the seat.

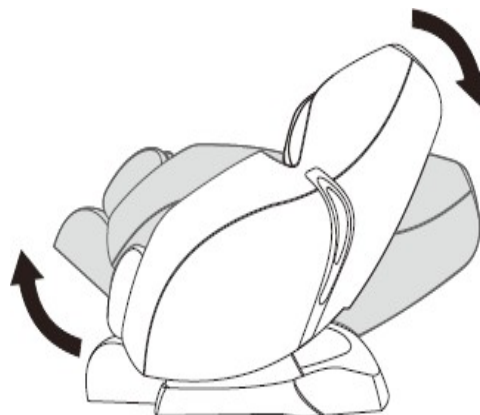

* Can people who have health problems use the massage?

People who have health problems should consult a doctor before using the application of this product. Massage called "tactile pressure stimulation" through muscle compression, relieves muscle tension and increases blood circulation. Depending on the different pathogens, massage may worsen the condition. Consult your doctor before using this product.

* How much energy consumption per month when using this product?

According to 30 minutes per day, the energy consumption of this product is about 1.5 kWh per month.

* Does it matter that I feel, the difference in the strength of the massage between the left and right massage wheel.

Due to the structure of the movement during the massage, you can feel the difference in the strength of the left and right massage wheel. To simulate the most natural massage technique, the chair adopts a movement structure, which allows the left and right massaging wheels to alternately strike the back. During the massage, the specific position of the left and right massaging wheels contacting the back may vary slightly, leading to a different sensation of massage power on the left and right sides.

*What age group is this massage chair suitable for?

This massage chair is suitable for people between the ages of 18 and 75. Minors and the elderly must be accompanied by a guardian when using this device.

Problem	Causes and solutions	
Produkt nie działa	Wtyczka zasilania produktu nie jest podłączona, a główny przełącznik zasilania nie jest włączony	Podłącz wtyczkę zasilania i ustaw przełącznik zasilania do pozycji „1”
Przestał pracować podczas masażu	Skończył się czas masażu	Jeśli chcesz ponownie wykonać masaż, włącz go
	Przegrzanie silnika z powodu zbyt długiej pracy	Wyłącz fotel i odczekaj, aż silnik ostygnie
Podczas masażu zatrzymują się kółka masujące, a fotel przy dużym oporze generuje alarmy dźwiękowe.	Fotel napotyka zbyt duży opór	Wyłącz zasilanie i wyreguluj pozycję siedzącą, a następnie włącz ponownie fotel
Nie można regulować pozycji nóg	Możliwe przeszkody w okolicach fotela	Usuń przeszkody w okolicy fotela przed jego uruchomieniem
Koło masujące nie osiąga pozycji ramienia ani szyi	Wykrywanie barku może być niższe niż rzeczywista pozycja	Po dopasowaniu pozycji siedzącej ponownie zbadaj pozycję barków

If the chair stopped working during the massage, it may also be due to too much load.

Specifications:

Product name: SAKURA COMFORT PLUS MASSAGE SEAT.

Product number: 806

Voltage Rating: 220V

Rated frequency: 50Hz Rated

power: 120W

Maximum working time: 30min

Vertical Height: 1480 x 770 x 1130mm

Horizontal Height: 1730 x 770 x 890mm Gross

weight: 104kg

Net weight: 90kg Cable

length: 190.5cm

Room temperature during use: 0C~35C° Relative humidity:

20%~80%

Storage temperature: -5C~35C°

Humidity level: 20%~80%

Safety features: overheat and overvoltage protection Maximum user weight:

100kg


Set includes: massage chair, control panel, power cord, instructions

SAFETY MEASURES

1. The device is a professional equipment for use in beauty parlors. Operation of the device only by qualified cosmetic personnel avoids undesirable consequences during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. All servicing and repairs must be performed only by an authorized service technician (ACTIVESHOP SP. Z O.O. company).
3. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.
4. Immediately unplug the device from the outlet and contact an authorized service provided by ACTIVESHOP SP. Z O.O. in the following cases:
 - a) liquid has entered the device, b) the device emits a strange smell, smoke or makes strange sounds, c) the power cord has been damaged, d) the device has been knocked over or its housing has been damaged.
5. Do not lay any objects on the cables. Do not install the device where someone may step on the power cord.
6. For safety purposes, unplug the power cord from the outlet each time you finish working with the device.
7. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
9. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device its damage and even burning.

CAUTION:

1. In the event of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.
2. This equipment may be used by children at least 8 years old and by persons with reduced physical and mental capabilities and persons with inexperience and lack of familiarity with the equipment, if supervision or instruction on the use of the equipment in a safe manner is provided so so that the associated risks are understood.
3. The device is not intended for play by children. Do not allow children to play with the device.
4. Do not leave the appliance unattended when children or persons without sufficient knowledge in the use of the appliance are near it.
5. This electrical appliance is not a toy. Improper use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.

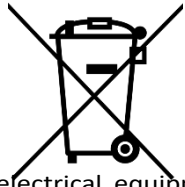

DISPOSAL OF THE DEVICE

Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Electrical appliances should not be disposed of in household waste containers. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EC concerning used electrical and electronic used electrical electrical equipment should be collected separately, and then handed over to collection points for used electronic and electrical equipment.

At the end of their useful life, as well as old appliances contain full-value recyclable components, so they should be handed over for reprocessing. Therefore, they should be handed over to appropriate collection points, as well as they can also be handed over to ACTIVESHOP Ltd.

STORAGE AND TRANSPORTATION

The device should be transported at a temperature in the range of (-) 20 °C to (+) 50 °C only in its original packaging. Store the device in a well-ventilated area with a relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.

